LOW BATTERY INDICATORS:

When the batteries grow weak, Fingerlings® HUGS will become unresponsive. When this happens. Power OFF and replace all batteries.

IMPORTANT BATTERY INFORMATION:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries [standard (Carbon-Zinc), Alkaline or rechargeable] or rechargeable batteries of different capacities.
- Remove rechargeable batteries from the toy before recharging them.
- Rechargeable batteries are only to be charged under adult supervision.
- Please respect the correct polarity, (+) and (-).
- Do not try to recharge non-rechargeable batteries.
- Do not dispose of batteries into fire.
- Replace all batteries of the same type/brand at the same time.
- Manufactured and distributed by WowWee Group Limited. Fingerlings® and all product names, designations and logos are trademarks of WowWee Group Limited. Copyright 2016-2018 WowWee Group Limited. All rights reserved. Patent Pending.

Customer Service Website: https://support.wowwee.com

- We recommend that you retain our address for future reference.
- Product and colors may vary.
- Packaging printed in China.
- CAN ICES-3(B)/NMB-3(B)
- MADE IN CHINA

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular Installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- The supply terminals are not to be short-circuited.
- Remove exhausted batteries from the toy.
- Batteries should be replaced by adults.

Reorient or relocate the receiving antenna

that may cause undesired operation.

For these purposes, the party responsible is:

the receiver is connected

the following two conditions:

WowWee USA Inc.

1-800-310-3033

Increase the separation between the equipment and receiver

(1) This device may not cause harmful interference, and

7855 Fay Avenue, Suite 310, La Jolla CA. USA 92037

For full list of inputs, please visit http://wowwee.com/fingerlings

Consult the dealer or experienced radio/TV technician for help

· Connect the equipment into an outlet on a circuit different from that to which

This Device complies with Part 15 of the FCC Rules. Operation is subject to

(2) This device must accept any interference received, including interference

For warranty information, please visit http://wowwee.com/information/warranty

WARNING! This equipment may experience difficulty and/or memory loss when subjected to any electrostatic

discharge, radio frequency interference, or sudden power surge/interruption. The user is encouraged to reset the equipment should any of these occur.


- Batteries should be recycled or disposed of as per state and local guidelines.
- Remove batteries if your Fingerlings® HUGS will be stored or not played with for more than 4 weeks.
- Protect the environment by not disposing of this product with household waste. Check your local authority for recycling advice and facilities.



Thank you for purchasing a Fingerlings® HUGS from WowWee®!

Your super plush pet pal is an expert at TLC and at being silly! Their long arms are perfect for big hugs and these cuddle monkeys never want to let you go! Swing them, pet them, and rock them to sleep, or give them a kiss and watch them kiss you back! Record what you say and hear them repeat it in funny ways!

Take a few minutes to look through this user manual so you can get to know your Fingerlings® HUGS!

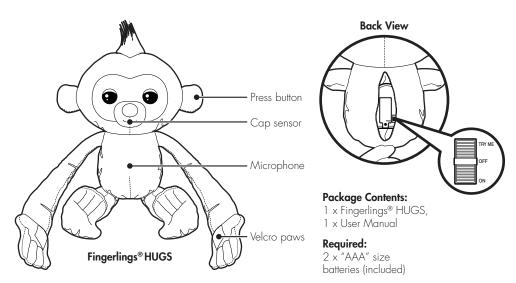

Take note of the following when playing with your Fingerlings® HUGS:

- Avoid putting articles of clothing on your Fingerlings® HUGS as it might inhibit the proper functioning of the sensors.
- Do not immerse your Fingerlings® HUGS or any parts of it in water or any other form of liquid.
- If your Fingerlings® HUGS gets dirty, you can wash it using a clean cloth slightly dampened with warm water.
- Do not kick your Fingerlings® HUGS as this might damage the mechanical functions.
- Do not put anything into your Fingerlings® HUGS's eyes.



 WowWee Group Limited
 WowWee Canada Inc.

 Energy Plaza, 301A-C
 3700 Saint Patrick Street

 92 Granville Road
 Suite 206, Montreal, QC,

 T.S.T. East, Hong Kong
 H4E 1A2, Canada




X

HOW TO PLAY

Flip your Fingerlings® HUGS switch from "TRY ME" mode to "ON" mode.

> TRY ME OFF



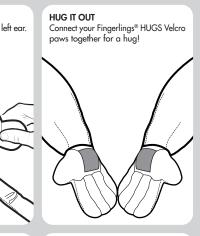

Shake your Fingerlings® HUGS for a


MWAH

Press your Fingerlings® HUGS's mouth to your skin to get a kiss. The longer you hold it, the longer the kiss will last.

WEEEEE Throw your Fingerlings® HUGS up in the air for a fun reaction!



EXCUSE YOU Pat your Fingerlings® HUGS's back for a burp!

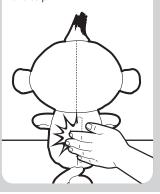



WOO-HOO Spin your Fingerlings® HUGS several times to get it super excited!



TOOT

silly surprise!



TICKLE TIME



NIGHTY NIGHT

Place your Fingerlings® HUGS on a flat Press your Fingerlings® HUGS's mouth surface. Press your fingers on your against your skin for a sleepy kiss. Fingerlings[®] HUGS's belly and gently

FUN LYING DOWN

SWEET DREAMS Cradle and rock your Fingerlings® HUGS in your arms to hear sleepy sighs and snores.







ALL PLAYED OUT?

To power down your Fingerlings® HUGS, turn it upside down, press the left ear


and hold until your Fingerlings® HUGS

FUN UPSIDE DOWN

MONKEY AROUND

Shake your Fingerlings® HUGS upside down to trigger funny monkey sounds!

RASPBERRY KISS Press your Fingerlings® HUGS's mouth against your skin for a raspberry kiss sound!

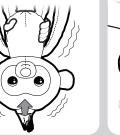





BATTERY INFORMATION

NOTE: Make sure the main power switch is set to OFF prior to changing the batteries. To install or change your Fingerlings[®] HUGS batteries:

- 1. Locate and open the battery compartment door on the back of your Fingerlings® HUGS by opening the velcro flap.
- 2. Use a Phillips screwdriver (not included) to remove the screw on the battery compartment door.
- 3. Insert the 2 x "AAA" batteries (included) according to the diagram. Ensure that the positive and negative polarities match the illustrations inside the battery compartment.
- 4. Replace the battery compartment door and replace the screw using the screwdriver. Do not over-tighten. Close the velcro flap on your Fingerlings® HUGS's back

